

PROX 402 WIRING DIAGRAM

CONNECTIONS

1. RED - 12V DC (+)
2. BLACK - GROUND (-)
3. YELLOW - DOOR SENSOR / BUTTON
4. BROWN - RELAY OUTPUT (NC)
5. BLUE - RELAY OUTPUT (NO)
6. GREEN - RS 232 BUS (RxD)
7. VIOLET - RS 232 BUS (TxD)
8. WHITE - NC

VARIANT 1

An additional input (yellow wire) is configured as a relay control

VARIANT 2

An additional input (yellow wire) is configured as a door sensor

How to configure an additional input is described in the Prox User Guide

VARIANT 1 Button





VARIANT 2 Door Sensor



External RS 232 interface for connection to the PC with the Master 2.5 software installed in it using an additional cable



Additional serial communication bus for connection to the PC with the Master 2.5 software installed in it

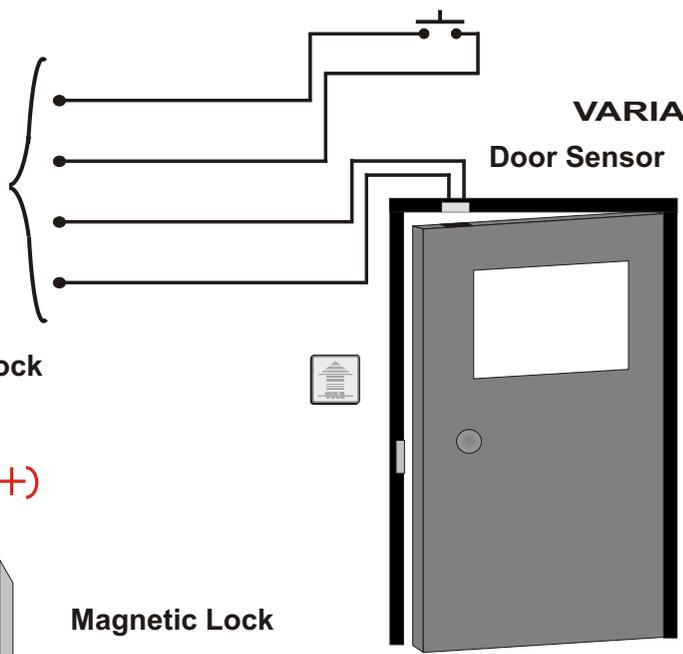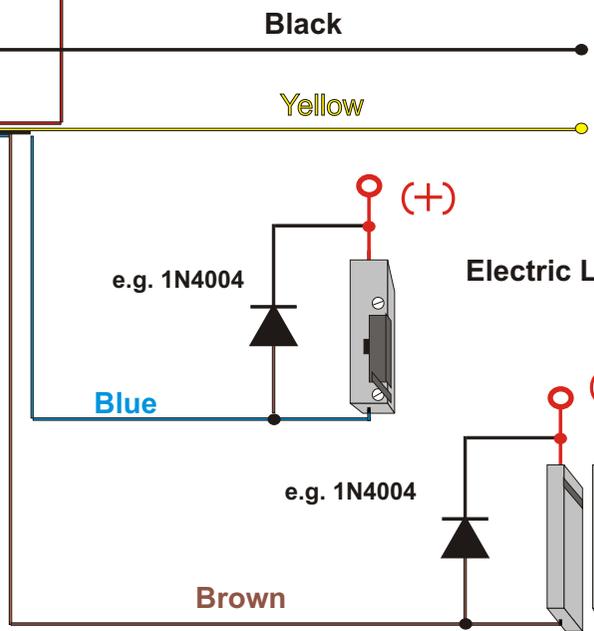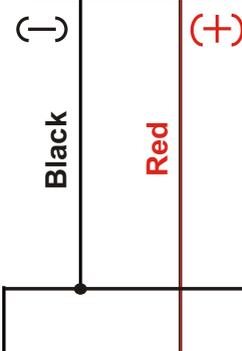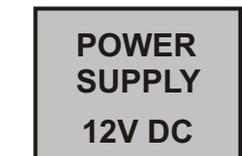


ATTENTION

NO output is grounded (-), when relay is ON
 NC output is grounded (-), when relay is OFF
 1A max relay current

External relay outputs:

- 1 - COM
- 2 - NC
- 3 - NO

Prox 402 Reader Blue
 Prox 402 Reader Blue

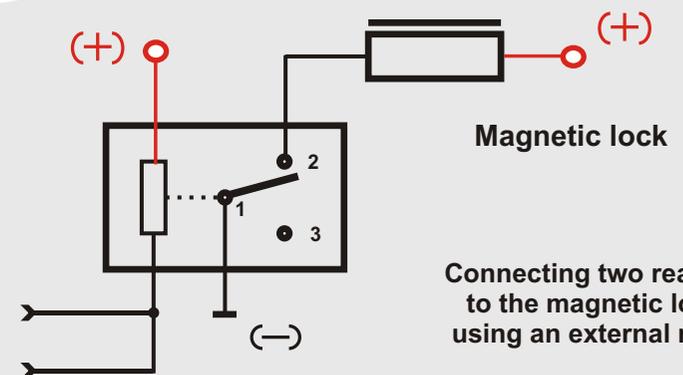

Magnetic lock

Connecting two readers to the magnetic lock using an external relay